



PLAN VIEW

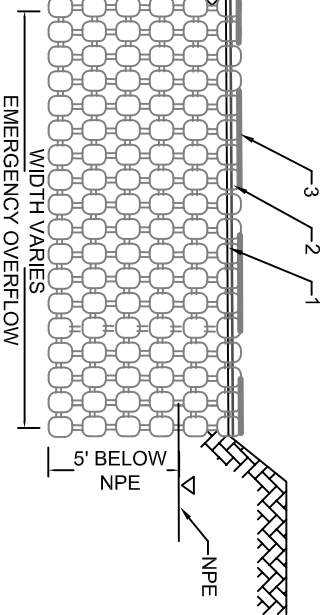

ELEVATION VIEW

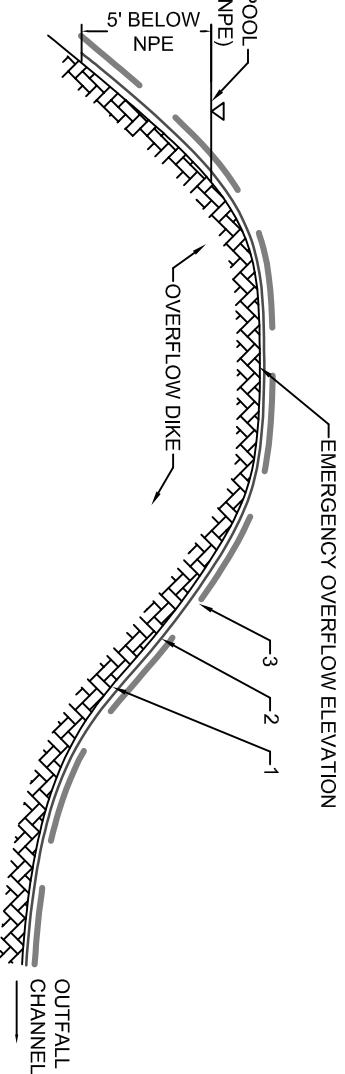

RIGHT VIEW

**FLEX-A-MAT INFORMATION**

**Manufacturer:** Motz Enterprises, Inc.  
**Product Name:** Flex-a-mat™  
**Address:** 11006 Reading Road, Suite 301  
 Cincinnati, Ohio 45241  
**Telephone:** 513-772-MOTZ (6689)  
**Fax:** 513-772-6690  
**Contact:** Matt Motz, Director of Business Development  
 Matt@Flexamat.com  
**Website:** [www.Flexamat.com](http://www.Flexamat.com)

**NOTES**

1. ALL SUBGRADE SURFACES PREPARED FOR PLACEMENT OF MATS SHALL BE SMOOTH AND FREE OF ALL ROCKS, STICKS, ROOTS, OTHER PROTRUSIONS, OR DEBRIS OF ANY KIND. THE PREPARED SURFACE SHALL PROVIDE A FIRM UNYIELDING FOUNDATION FOR THE MATS WITH NO SHARP OR ABRUPT BREAKS IN THE GRADE.
2. APPLY SEED DIRECTLY TO PREPARED SOIL PRIOR TO FLEX-A-MAT INSTALLATION. USE SEED PER PROJECT SPECIFICATIONS.
3. INSTALL FLEX-A-MAT ROLLS. MAT SHALL BE THE FULL WIDTH OF THE SPILLWAY.
4. MAT SHALL EXTEND 5' BELOW NORMAL POND ELEVATION.

**FLEX-A-MAT™ DAM OVERFLOW  
PLAN AND PROFILE DETAIL**